



inside cover lens

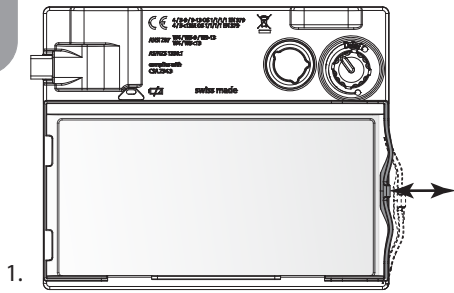


1.

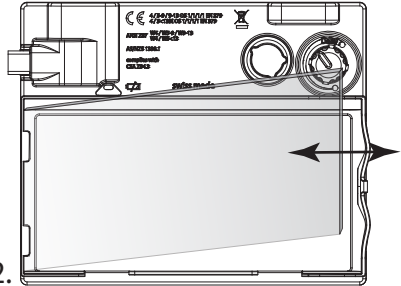



2.



front cover lens

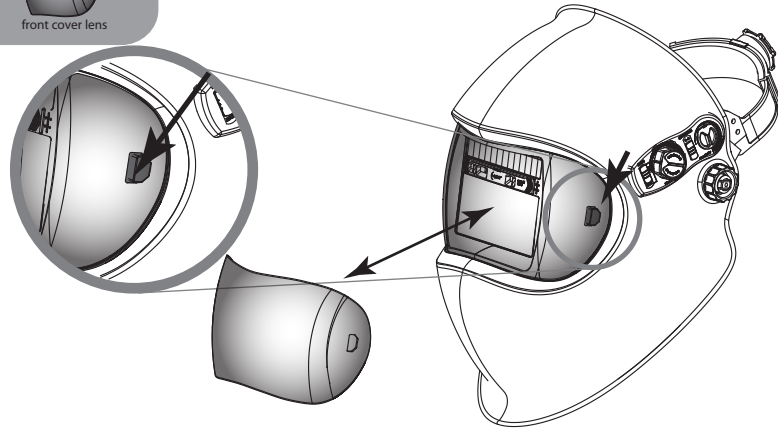

battery change

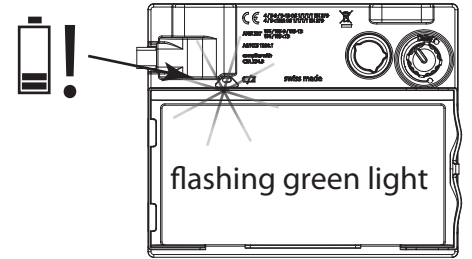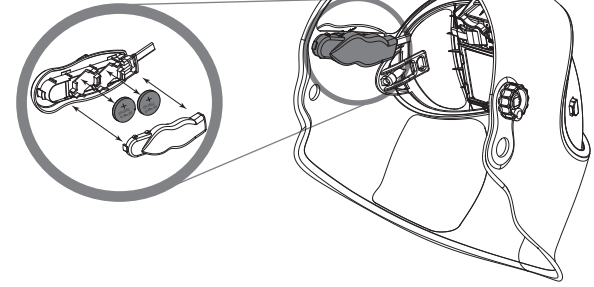


flashing green light

# spare parts e684 x1




cartridge

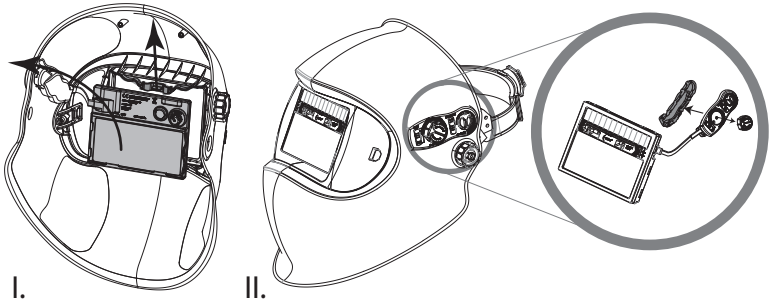

I.

II.

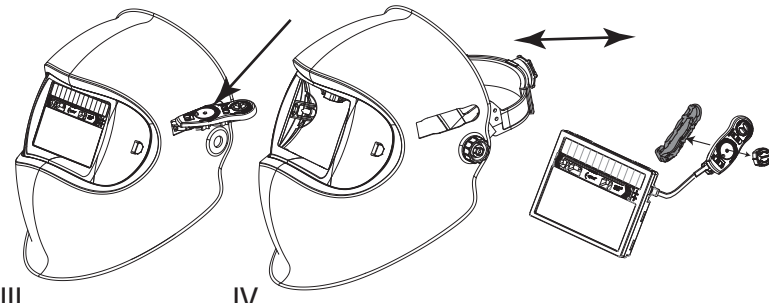


III.

IV.



adjust headband

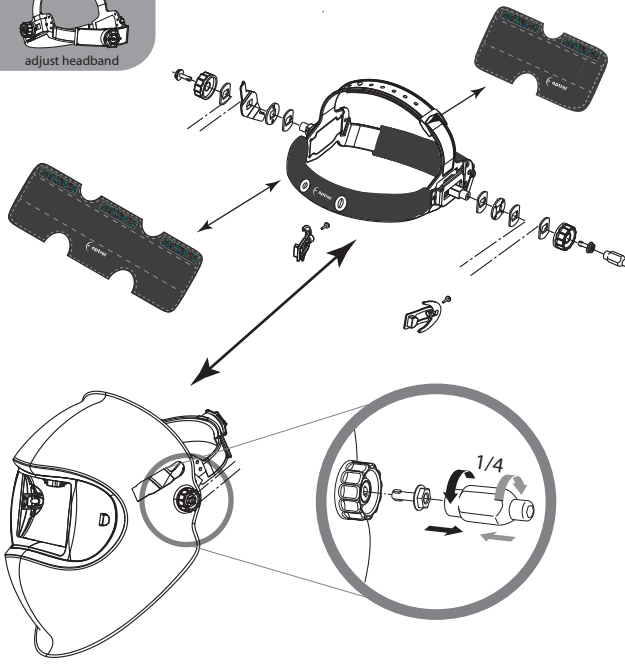

# optrel e684 x1

	5001.684
	5012.420
	5000.210
	5003.501
	5000.001
	5003.500
	5003.250
	5004.073
	5004.020